

<b>Art.-Nr.</b>	<b>Hersteller</b>	<b>Modellbezeichnung</b>
0947	Acer	D100
1344	Acer	e305
1345	Acer	e310
0308	Acer	N20
0309	Acer	N30
0310	Acer	N35
1346	Acer	p610
1347	Acer	p630
1348	Acer	p660
0311	Airboard	4000
0237	Alcatel	OneTouch 735i
0238	Alcatel	OneTouch 756
1349	Alpine	Blackbird
0254	Apple	iPod
0252	Apple	iPod Mini - Komplettmantel
0253	Apple	iPod Mini - nur Display
1196	Apple	iPod nano
1021	Apple	iPod Video/ ab 20GB
0312	Asus	MyPal A600
0313	Asus	MyPal A620
0314	Asus	MyPal A620 BT
0315	Asus	MyPal A713
0316	Asus	MyPal A730W
1350	AV Map	geosat 5
1141	Becker	Traffic Assist Highspeed / II
1351	Becker	Traffic Assist PRO / PRO Ferrari
1083	BenQ-Siemens	C81
0975	BenQ-Siemens	CF75
1181	BenQ-Siemens	E71
0976	BenQ-Siemens	EF81
0993	BenQ-Siemens	EL71
1084	BenQ-Siemens	M81
0915	BenQ-Siemens	S68
0960	BenQ-Siemens	S88
0239	BlackBerry	7100t
0240	BlackBerry	7100v
0346	BlackBerry	7290
0241	BlackBerry	7730
1185	BlackBerry	8100
1029	BlackBerry	8700v
1335	BlackBerry	8800
0242	BlackBerry	A925
1352	Blaupunkt	Lucca 5.2
0255	Blaupunkt	RX 52
1165	Blaupunkt	TravelPilot Lucca 3.3/3.4/MP3
1353	Camos	CN 770
0418	Canon	Digital IXUS 30
0419	Canon	Digital IXUS 40
0423	Canon	Digital IXUS 400
0420	Canon	Digital IXUS 430
0421	Canon	Digital IXUS 50
0424	Canon	Digital IXUS 500
0422	Canon	Digital IXUS 55
0893	Canon	Digital IXUS 60

0892	Canon	Digital IXUS 65
1265	Canon	Digital IXUS 70
0425	Canon	Digital IXUS 700
1264	Canon	Digital IXUS 75
0426	Canon	Digital IXUS 750
0789	Canon	Digital IXUS 800 IS
1040	Canon	Digital IXUS 850 IS
1041	Canon	Digital IXUS 900 Ti
1461	Canon	Digital IXUS 950 IS
0430	Canon	Digital IXUS i
0815	Canon	Digital IXUS i Zoom
0427	Canon	Digital IXUS i5
1042	Canon	Digital IXUS i7 zoom
0428	Canon	Digital IXUS II
0894	Canon	Digital IXUS Wireless
0431	Canon	EOS 10D
0433	Canon	EOS 1D
0432	Canon	EOS 1D Mark II
1271	Canon	EOS 1D Mark III
0429	Canon	EOS 1D Mark II N
0434	Canon	EOS 1Ds
0435	Canon	EOS 1Ds Mark II
0437	Canon	EOS 20D
0816	Canon	EOS 20Da
0438	Canon	EOS 300D
0439	Canon	EOS 300V
0931	Canon	EOS 30D
0417	Canon	EOS 350D
1039	Canon	EOS 400D
0436	Canon	EOS 5D
0441	Canon	EOS D30
0440	Canon	EOS D60
0289	Canon	MV30i
0442	Canon	PowerShot A400
0443	Canon	PowerShot A410
0900	Canon	PowerShot A420
0895	Canon	PowerShot A430
1267	Canon	PowerShot A450
1268	Canon	PowerShot A460
0444	Canon	PowerShot A510
0445	Canon	PowerShot A520
0896	Canon	PowerShot A530
0897	Canon	PowerShot A540
1215	Canon	PowerShot A550
1270	Canon	PowerShot A560
1269	Canon	PowerShot A570IS
0448	Canon	PowerShot A60/A70
0446	Canon	PowerShot A610
0447	Canon	PowerShot A620
1046	Canon	PowerShot A630
1045	Canon	PowerShot A640
0899	Canon	PowerShot A700
1044	Canon	PowerShot A710 IS
0449	Canon	PowerShot A75
0450	Canon	PowerShot A85

0451	Canon	PowerShot A95
0452	Canon	PowerShot G2
0453	Canon	PowerShot G3
0454	Canon	PowerShot G5
0455	Canon	PowerShot G6
1043	Canon	PowerShot G7
0456	Canon	PowerShot Pro 1
0457	Canon	PowerShot S1 Is
0458	Canon	PowerShot S2 Is
0954	Canon	PowerShot S3 Is
0459	Canon	PowerShot S50
0460	Canon	PowerShot S60
0461	Canon	PowerShot S70
0462	Canon	PowerShot S80
0898	Canon	PowerShot SD30
1266	Canon	PowerShot TX1
0257	Casio	Classpad 300
0258	Casio	DT-810M50E
0319	Casio	E105G
0317	Casio	E10G
0320	Casio	E115G
0321	Casio	E125G
0318	Casio	E15G
0322	Casio	E200G
0323	Casio	EM 500G
0474	Casio	EX-P505
0463	Casio	EX-P600
0464	Casio	EX-P700
0465	Casio	EX-S100
0478	Casio	EX-S20
0466	Casio	EX-S500/600
1063	Casio	EX-S770
1219	Casio	EX-V7
0814	Casio	EX-Z10
1003	Casio	EX-Z1000
1220	Casio	EX-Z1050
0264	Casio	EX-Z11
0475	Casio	EX-Z110
0476	Casio	EX-Z120
0467	Casio	EX-Z3
0468	Casio	EX-Z30
0469	Casio	EX-Z40
1007	Casio	EX-Z5
0470	Casio	EX-Z50
0477	Casio	EX-Z500
0471	Casio	EX-Z55
0472	Casio	EX-Z57
1194	Casio	EX-Z6
0891	Casio	EX-Z60
0890	Casio	EX-Z600
1236	Casio	EX-Z65
1192	Casio	EX-Z7
1195	Casio	EX-Z70
1062	Casio	EX-Z700
1294	Casio	EX-Z75

0473	Casio	EX-Z750
0889	Casio	EX-Z850
0479	Casio	QV-R40
0480	Casio	QV-R41
0481	Casio	QV-R51-52-61
0482	Casio	QV-R62
1354	Clarion	Map 360
1355	Clarion	Map 370
1356	Clarion	Map 560
1357	Clarion	Map 670
1358	Clarion	Map 770
1137	Clarion	VMA 8582
1146	Clarion	VRX 633R
0971	COWON	Audio X5L
1323	Crocfol	Anti-Reflex 2,5 Zoll
1324	Crocfol	Anti-Reflex 2,7 Zoll
1333	Crocfol	Anti-Reflex 2,8 Zoll
1325	Crocfol	Anti-Reflex 3,0 Zoll
0404	Crocfol	Anti-Reflex 3,5 Zoll
1080	Crocfol	Anti-Reflex 4,0 Zoll
1205	Crocfol	Anti-Reflex 4.3 Zoll
1334	Crocfol	Anti-Reflex 5,0 Zoll
1320	Crocfol	Classic 2,5 Zoll
1321	Crocfol	Classic 2,7 Zoll
1322	Crocfol	Classic 3,0 Zoll
0405	Crocfol	Classic 3,5 Zoll
1206	Crocfol	Gutschein Anti-Reflex
0958	Crocfol	Gutschein PLUS
1327	Crocfol	Plus 2,5 Zoll
1452	Crocfol	Plus 3,0 Zoll
1328	Crocfol	Plus 3,5 Zoll
1329	Crocfol	Plus 4,0 Zoll
1330	Crocfol	Plus 4,3 Zoll
0410	Crocfol	Premium 2,0 Zoll
0411	Crocfol	Premium 2,2 Zoll
0412	Crocfol	Premium 2,5 Zoll
0413	Crocfol	Premium 2,8 Zoll
0414	Crocfol	Premium 3,0 Zoll
0324	Dell	Axim X3
0326	Dell	Axim X30
0325	Dell	Axim X3i
0327	Dell	Axim X5
0328	Dell	Axim X50
0329	Dell	Axim X50v
1359	Delphi Grundig	Nav 100
1360	Delphi Grundig	Nav 210e
1361	Delphi Grundig	Nav 210w
0483	Epson	L-500V
0259	Epson	P2000
1143	Falk	N30/50/80/120/200
1142	Falk	Navigator 7000 PRO SG
1189	Falk	S100/120
1314	fitage	Katharina das Große
0484	Fujifilm	Digital Q1
0486	Fujifilm	FinePix 2600 Zoom

0487	Fujifilm	FinePix A120
0488	Fujifilm	FinePix A310
0489	Fujifilm	FinePix A330
0491	Fujifilm	FinePix A340
0490	Fujifilm	FinePix A345
0492	Fujifilm	FinePix A370
0911	Fujifilm	FinePix A400
0912	Fujifilm	FinePix A500
0913	Fujifilm	FinePix A600
1317	Fujifilm	FinePix A610
1047	Fujifilm	FinePix A700
1255	Fujifilm	FinePix A820/A900
0493	Fujifilm	FinePix E500
0494	Fujifilm	FinePix E510
0495	Fujifilm	FinePix E550
0791	Fujifilm	FinePix E900
0496	Fujifilm	FinePix F10
0817	Fujifilm	FinePix F11
1050	Fujifilm	FinePix F20
0909	Fujifilm	FinePix F30
0497	Fujifilm	FinePix F401
1257	Fujifilm	FinePix F40fd
0498	Fujifilm	FinePix F420
0485	Fujifilm	FinePix F440
0499	Fujifilm	FinePix F440/F450
0500	Fujifilm	FinePix F455
0792	Fujifilm	FinePix F460
0910	Fujifilm	FinePix F470
0501	Fujifilm	FinePix F601
0502	Fujifilm	FinePix F610
1025	Fujifilm	FinePix F650
0503	Fujifilm	FinePix F700
0504	Fujifilm	FinePix F710
0505	Fujifilm	FinePix F810
0506	Fujifilm	FinePix M603
0507	Fujifilm	FinePix MX2900
0508	Fujifilm	FinePix S2 Pro
0509	Fujifilm	FinePix S20 Pro
0510	Fujifilm	FinePix S3 Pro
0511	Fujifilm	FinePix S3500
0512	Fujifilm	FinePix S5000
0914	Fujifilm	FinePix S520
0513	Fujifilm	FinePix S5500
0793	Fujifilm	FinePix S5600
1254	Fujifilm	FinePix S5700
0514	Fujifilm	FinePix S602
1049	Fujifilm	FinePix S6500 fd
0515	Fujifilm	FinePix S7000
0517	Fujifilm	FinePix S9500/S9000
1048	Fujifilm	FinePix S9600
0908	Fujifilm	FinePix V10
0516	Fujifilm	FinePix Z1/Z2/Z3
1256	Fujifilm	FinePix Z5fd
0347	Fujitsu Siemens	LOOX 400
0348	Fujitsu Siemens	LOOX 410

0349	Fujitsu Siemens	LOOX 420
0350	Fujitsu Siemens	LOOX 600
0351	Fujitsu Siemens	LOOX 610
0352	Fujitsu Siemens	LOOX 700
0353	Fujitsu Siemens	LOOX 710
0354	Fujitsu Siemens	LOOX 720
1449	Fujitsu Siemens	LOOX 830
1343	Fujitsu Siemens	LOOX N100/N110
1126	Fujitsu Siemens	LOOX N500
1336	Fujitsu Siemens	LOOX N520
0260	Garmin	3600
1078	Garmin	60C/60CS
1171	Garmin	60Cx/60CSx
1318	Garmin	Forerunner 101/201/301
1319	Garmin	Forerunner 205/305
0261	Garmin	Geko 101/201/301
0262	Garmin	GPSmap 276C
1362	Garmin	nüvi 200
1363	Garmin	nüvi 250
1364	Garmin	nüvi 270
1365	Garmin	nüvi 300 de Luxe
1167	Garmin	nüvi 300-310-350-360-370
1366	Garmin	nüvi 350T
1367	Garmin	nüvi 360T
1326	Garmin	nüvi 600/610/650/660/670/680
0263	Garmin	Quest
1168	Garmin	StreetPilot 2610
1095	Garmin	StreetPilot 2820
1368	Garmin	StreetPilot 7200
1369	Garmin	StreetPilot 7500
1307	Garmin	StreetPilot c510 de Luxe
1130	Garmin	StreetPilot c550
0265	Garmin	Vista
1370	Garmin	Zumo 400
1371	Garmin	Zumo 500
1372	Garmin	Zumo 550
1298	General Imaging	A730/A830
1300	General Imaging	E1030
1299	General Imaging	E1040/E850
1301	General Imaging	E1240
1278	General Imaging	G1
0518	Hewlett Packard	215
0519	Hewlett Packard	320
0520	Hewlett Packard	620
0521	Hewlett Packard	735
0522	Hewlett Packard	850
0523	Hewlett Packard	935
0524	Hewlett Packard	945
0389	Hewlett Packard	lpaq 4100
0367	Hewlett Packard	lpaq h1900
0368	Hewlett Packard	lpaq h1910
0369	Hewlett Packard	lpaq h1915
0370	Hewlett Packard	lpaq h1920
0371	Hewlett Packard	lpaq h1930
0372	Hewlett Packard	lpaq h1935

0373	Hewlett Packard	Ipaq h1937
0374	Hewlett Packard	Ipaq h1940
0375	Hewlett Packard	Ipaq h1945
0376	Hewlett Packard	Ipaq h2210
0377	Hewlett Packard	Ipaq h2215
0378	Hewlett Packard	Ipaq h3600
0379	Hewlett Packard	Ipaq h3630
0380	Hewlett Packard	Ipaq h3660
0381	Hewlett Packard	Ipaq h3715
0382	Hewlett Packard	Ipaq h3760
0383	Hewlett Packard	Ipaq h3800
0384	Hewlett Packard	Ipaq h3835
0385	Hewlett Packard	Ipaq h3850
0386	Hewlett Packard	Ipaq h3950
0387	Hewlett Packard	Ipaq h3955
0388	Hewlett Packard	Ipaq h3970
0390	Hewlett Packard	Ipaq h4110
0391	Hewlett Packard	Ipaq h4115
0392	Hewlett Packard	Ipaq h4150
0393	Hewlett Packard	Ipaq h4155
0395	Hewlett Packard	Ipaq h4350
0396	Hewlett Packard	Ipaq h4355
0394	Hewlett Packard	Ipaq h4705
1154	Hewlett Packard	Ipaq hw6915
0397	Hewlett Packard	Ipaq hx2410
0398	Hewlett Packard	Ipaq hx2750
0399	Hewlett Packard	Ipaq hx4700
0525	Hewlett Packard	PhotoSmart R507
0526	Hewlett Packard	PhotoSmart R707
1234	Hewlett Packard	PhotoSmart R727
1208	Hewlett Packard	PhotoSmart R817
1235	Hewlett Packard	PhotoSmart R967
1373	Hewlett Packard	RX 5720
1374	Hewlett Packard	RX 5935
1216	HTC	Advantage X7500
1173	HTC	Charmer
1174	HTC	TyTN
1175	HTC	Universal
0243	i-mate	JAM
0969	i-mate	K-JAM
0244	i-mate	PDA2
0245	i-mate	PDA2k
0246	i-mate	PPC
0527	Jenoptik	JD 3.3 xz3
0290	JVC	GR-D225EX
0291	JVC	GR-DVL9800
0292	JVC	GZ-MC200
0293	JVC	GZ-MC500
0974	JVC	KD-AVX1
1458	JVC	KD-AVX2
1375	JVC	KV-PX 70
1027	Kenwood	DDX-6029 (Autoradio)
1149	Kenwood	KVT-627DVD
0528	Kodak	C300
0529	Kodak	C330

0530	Kodak	C340
0531	Kodak	C360
0883	Kodak	C533
1263	Kodak	C613
0884	Kodak	C643
0882	Kodak	C663
1107	Kodak	C743
1106	Kodak	C875
0534	Kodak	CX6230
0556	Kodak	CX6330
0536	Kodak	CX7220
0537	Kodak	CX7330
0538	Kodak	CX7430
0547	Kodak	DCS Pro 14N
0548	Kodak	DCS Pro SLR c
0551	Kodak	DX4330
0532	Kodak	DX4530
0533	Kodak	DX6440
0535	Kodak	DX6490
0549	Kodak	DX7590
0550	Kodak	DX7630
0553	Kodak	EasyShare One
0552	Kodak	LS633
0555	Kodak	LS755
1108	Kodak	P712
0545	Kodak	P850
0546	Kodak	P880
1259	Kodak	V1003
0544	Kodak	V530
0543	Kodak	V550
0887	Kodak	V570
0886	Kodak	V603
1109	Kodak	V610
1105	Kodak	V705
1260	Kodak	V803
0885	Kodak	Z612
0554	Kodak	Z650
0539	Kodak	Z700
1341	Kodak	Z710
1262	Kodak	Z712IS
0540	Kodak	Z730
0541	Kodak	Z740
0542	Kodak	Z7590
1261	Kodak	Z885
0557	Konica Minolta	400Z
0558	Konica Minolta	420z
0559	Konica Minolta	500z
0560	Konica Minolta	A200
0561	Konica Minolta	Dimage 3200
0562	Konica Minolta	Dimage 7
0563	Konica Minolta	Dimage 7Hi
0564	Konica Minolta	Dimage 7i
0565	Konica Minolta	Dimage A1
0566	Konica Minolta	Dimage A2
0568	Konica Minolta	Dimage F300

0569	Konica Minolta	Dimage X20
0570	Konica Minolta	Dimage Xi
0572	Konica Minolta	Dynax 5D
0571	Konica Minolta	Dynax 7
0573	Konica Minolta	Dynax 7D
0574	Konica Minolta	E50
0575	Konica Minolta	G400
0576	Konica Minolta	G530
0577	Konica Minolta	G600
0578	Konica Minolta	S304
0579	Konica Minolta	S414
0582	Konica Minolta	X1
0580	Konica Minolta	X50
0581	Konica Minolta	X60
0584	Konica Minolta	XG
0585	Konica Minolta	Z1
0587	Konica Minolta	Z10
0588	Konica Minolta	Z20
0589	Konica Minolta	Z3
0590	Konica Minolta	Z5
0591	Konica Minolta	Z6
0592	Kyocera	L3v
0593	Kyocera	L4v
1014	Leica	C-LUX 1
1258	Leica	C-LUX 2
0595	Leica	Digilux 1
0596	Leica	Digilux 2
1198	Leica	Digilux 3
0597	Leica	Digital Zoom
0598	Leica	Digitalmodul DMR
0594	Leica	D-LUX
0956	Leica	D-LUX 2
1197	Leica	D-LUX 3
1115	Leica	M8
0247	LG	2050
0248	LG	8120
0249	LG	C1200
0250	LG	C2200
0251	LG	C3300
0963	LG	C3310
0859	LG	F2300
0860	LG	F3000
1450	LG	KE850 Prada
1310	LG	KE970 Shine
0972	LG	KG800 Chocolate
1339	LG	KU800
1376	LG	LN 710
1377	LG	LN 715
0964	LG	M4410
0961	LG	P7200
0962	LG	S5200
0979	LG	U8290
1378	Magellan	Crossover GPS
1379	Magellan	Roadmate 2200T
1380	Magellan	Roadmate 3000T

1381	Magellan	Roadmate 3050T
1382	Magellan	Roadmate 6000T
0981	Magellan	Roadmate 700/800
0934	Magnion	DC8300
0599	Magnion	Slimline X5 5mio
1383	Medion	GoPal 210
1384	Medion	GoPal 460
1385	Medion	GoPal 465
1386	Medion	GoPal 470
1387	Medion	GoPal 500
1388	Medion	GoPal 510
1389	Medion	GoPal 515
0600	Medion	MD 40696
0336	Medion	MD 41258/40885/42592
0339	Medion	MD 41600
0340	Medion	MD 7200
0266	Medion	MD 95000
0341	Medion	MD 95069
1170	Medion	MD 96050
1203	Medion	MD 96080/GoPAL
0907	Medion	MD 96710
0337	Medion	PNA 150
0338	Medion	PNA 200
0601	Minox	4211
0955	Minox	5011
0948	Minox	6011
0936	Minox	6211
0602	Minox	6311
0935	Minox	8111
1112	Minox	DC1011
1113	Minox	DC8122
0888	Minox	DMP2
1390	Mio	C210
1391	Mio	C510E
1392	Mio	C710
1393	Mio	H610
0583	Mitac	Mio 168/69
0586	Mitac	Mio 268/269
0681	Mitac	Mio A201
1018	Mitac	Mio P350
0207	Mitsubishi	M342i
0208	Mitsubishi	M430i
0209	Motorola	A1000
0212	Motorola	A728
0213	Motorola	A780
0210	Motorola	A920
0211	Motorola	A925
0214	Motorola	Accompli 008
0215	Motorola	C450
0216	Motorola	C650
0217	Motorola	E1000
0218	Motorola	E365
0219	Motorola	E398
0831	Motorola	E770v
1166	Motorola	KRZR K1

1454	Motorola	KRZR K3
0832	Motorola	L6
1453	Motorola	MAXX V6
1465	Motorola	MOTOFONE F3
1177	Motorola	MotoRIZR Z3
0220	Motorola	MPX200
0221	Motorola	MPX220
0222	Motorola	MPX300
0223	Motorola	PEBL
0009	Motorola	RAZR V3
0833	Motorola	ROKR1
0843	Motorola	SLVR L7
0224	Motorola	V150
0225	Motorola	V22
0226	Motorola	V220
0227	Motorola	V300
0846	Motorola	V3i
0829	Motorola	V3x
0235	Motorola	V525
0236	Motorola	V550
0228	Motorola	V551
0229	Motorola	V600
0230	Motorola	V620
0231	Motorola	V635
0232	Motorola	V70
0233	Motorola	V80
0234	Motorola	V980
1200	Motorola	W220
1394	My Guide	3000
1395	My Guide	3100
1396	My Guide	3300
1397	My Guide	4300
1398	Naviflash	1020
1399	Naviflash	1060
1400	Navigon	3100
1401	navigon	3110
1402	Navigon	7100
1403	Navigon	7110
1404	Navigon	P9611
1139	Navigon	Transonic 5000
1140	Navigon	Transonic 6000
1405	Navigon	TS 6000T
1406	Navigon	TS 7000T
1136	Navilock	8" TFT
1308	Navman	F20
1407	Navman	F30
1408	Navman	F40
1409	Navman	F50
1145	Navman	iCN 320/330
1147	Navman	iCN 520
1009	Navman	iCN 550
0334	Navman	iCN 600
0335	Navman	iCN 630
1410	Navman	iCN 720
1129	Navman	iCN 750

1150	Navman	iDN 3000
1411	Navman	N20
1412	Navman	N40i
1413	Navman	N60i
0204	NEC	21i
0205	NEC	N400i
0206	NEC	N850
0603	Nikon	Coolpix 3200
0604	Nikon	Coolpix 4100
0605	Nikon	Coolpix 4600
0606	Nikon	Coolpix 5000
0607	Nikon	Coolpix 5200
0608	Nikon	Coolpix 5400
0609	Nikon	Coolpix 5500
0610	Nikon	Coolpix 5600
0611	Nikon	Coolpix 5700
0612	Nikon	Coolpix 5800
0613	Nikon	Coolpix 5900
0614	Nikon	Coolpix 7600
0616	Nikon	Coolpix 775
0615	Nikon	Coolpix 7900
0617	Nikon	Coolpix 8400
0618	Nikon	Coolpix 8700
0798	Nikon	Coolpix 8800
0620	Nikon	Coolpix 885
0621	Nikon	Coolpix 995
0797	Nikon	Coolpix L1/L101
1246	Nikon	Coolpix L10
1247	Nikon	Coolpix L11
1248	Nikon	Coolpix L12
0919	Nikon	Coolpix L2
0917	Nikon	Coolpix L3
0918	Nikon	Coolpix L4
1104	Nikon	Coolpix L5
1103	Nikon	Coolpix L6
0796	Nikon	Coolpix P1/P2
0922	Nikon	Coolpix P3
0923	Nikon	Coolpix P4
1253	Nikon	Coolpix P5000
0623	Nikon	Coolpix S1
1101	Nikon	Coolpix S10
0624	Nikon	Coolpix S2
1250	Nikon	Coolpix S200
0794	Nikon	Coolpix S3
0795	Nikon	Coolpix S4
0920	Nikon	Coolpix S5
1252	Nikon	Coolpix S50
1249	Nikon	Coolpix S500
1251	Nikon	Coolpix S50c
0921	Nikon	Coolpix S6
1023	Nikon	Coolpix S7c
1102	Nikon	Coolpix S9
0622	Nikon	Coolpix SQ
0625	Nikon	D100
0626	Nikon	D1X

0619	Nikon	D200
0627	Nikon	D2H
0628	Nikon	D2Hs
0629	Nikon	D2X
1076	Nikon	D2Xs
1114	Nikon	D40/D40x
0630	Nikon	D50
0631	Nikon	D70
0632	Nikon	D70s
1075	Nikon	D80
0633	Nikon	F100
0268	Nintendo	DS
1152	Nintendo	DS Lite
0270	Nintendo	Gameboy
0269	Nintendo	Gameboy Advance
0158	Nokia	1100
1086	Nokia	1110i
0159	Nokia	2100
1034	Nokia	2310
0160	Nokia	2600
1031	Nokia	2610
1305	Nokia	2626
0839	Nokia	2652
0032	Nokia	3120
0161	Nokia	3200
0162	Nokia	3220
0011	Nokia	3230
0980	Nokia	3250
1414	Nokia	330
0163	Nokia	3300
0164	Nokia	3310
0165	Nokia	3410
0166	Nokia	3510
0167	Nokia	3650/3660
0168	Nokia	5100
0012	Nokia	5140/5140i
1178	Nokia	5200/5300
0169	Nokia	5210
1156	Nokia	5500
1455	Nokia	5700
0400	Nokia	6021
0029	Nokia	6030
1082	Nokia	6070
1201	Nokia	6080
1202	Nokia	6085
0170	Nokia	6100
0034	Nokia	6101
0989	Nokia	6103
0267	Nokia	6111
0986	Nokia	6125
0990	Nokia	6131
1155	Nokia	6151
0171	Nokia	6170
0172	Nokia	6210
0173	Nokia	6220

0013	Nokia	6230
0010	Nokia	6230i
1016	Nokia	6233
1035	Nokia	6234
0174	Nokia	6260
0836	Nokia	6270
0853	Nokia	6280
1182	Nokia	6288
1311	Nokia	6290
1312	Nokia	6300
0175	Nokia	6310
0176	Nokia	6510
0177	Nokia	6600
0178	Nokia	6610
0014	Nokia	6630
0179	Nokia	6650
0015	Nokia	6670
0016	Nokia	6680
0017	Nokia	6681
0180	Nokia	6800
0181	Nokia	6810
0182	Nokia	6820
0183	Nokia	6822
0184	Nokia	7200
0185	Nokia	7250
0186	Nokia	7260
0187	Nokia	7270
0188	Nokia	7280
0944	Nokia	7360
0945	Nokia	7370
1313	Nokia	7373
0946	Nokia	7380
1306	Nokia	7390
0189	Nokia	7600
0190	Nokia	7610
0191	Nokia	7650
0192	Nokia	7670
0193	Nokia	7700
0194	Nokia	7710
0195	Nokia	8210
0196	Nokia	8310
0028	Nokia	8800
0197	Nokia	8850
0198	Nokia	8910
0199	Nokia	9210
0200	Nokia	9300
0201	Nokia	9500
1085	Nokia	E50
0854	Nokia	E60
0985	Nokia	E61
1451	Nokia	E61i
1446	Nokia	E65
0992	Nokia	E70
1456	Nokia	E90
0202	Nokia	Engage QD

0415	Nokia	N70
0984	Nokia	N71
1036	Nokia	N73
1464	Nokia	N76
0991	Nokia	N80
1218	Nokia	N800
0416	Nokia	N90
0987	Nokia	N91
1033	Nokia	N93
1463	Nokia	N93i
1331	Nokia	N95
0203	Nokia	N-Gage
1415	Novogo	A700
1416	Novogo	C700
1417	Novogo	C900
1418	Novogo	S700
1419	Novogo	T700
1420	Novogo	T900
0152	O2	X1
1186	O2	XDA Cosmo
0153	O2	XDA II
0154	O2	XDA III
0155	O2	XDA IIs
0156	O2	XDA mini
0858	O2	XDA Mini II
0830	O2	XDA mini S
0973	O2	XDA neo
1190	O2	XDA Orbit
0970	O2	XDA Phone
1133	O2	XDA Trion
0634	Olympus	C-2000
0635	Olympus	C-2020
0636	Olympus	C-2100
0637	Olympus	C-3000
0638	Olympus	C-3030
0639	Olympus	C-310 Zoom
0640	Olympus	C-370
0641	Olympus	C-4000
0642	Olympus	C-460
0643	Olympus	C-470
0644	Olympus	C-480
0648	Olympus	C-50
0645	Olympus	C-5000
0646	Olympus	C-5050
0647	Olympus	C-5060
0649	Olympus	C-60
0650	Olympus	C-70
0652	Olympus	C-7070
0651	Olympus	C-770
0653	Olympus	C-8080
0655	Olympus	E-1
0656	Olympus	E-10
0657	Olympus	E-20
0654	Olympus	E-300
0930	Olympus	E-330

1051	Olympus	E-400
1272	Olympus	E-410
0567	Olympus	E-500
1273	Olympus	E-510
0928	Olympus	FE-115
1081	Olympus	FE-120
0926	Olympus	FE-130
0927	Olympus	FE-140
1061	Olympus	FE-170
1060	Olympus	FE-180
1059	Olympus	FE-190
1058	Olympus	FE-200
1125	Olympus	FE-210
1121	Olympus	FE-230
1122	Olympus	FE-240
1120	Olympus	FE-250
0663	Olympus	IR-500
1055	Olympus	mju 1000
0658	Olympus	mju 400
0659	Olympus	mju 410
0660	Olympus	mju 500
0799	Olympus	mju 600
0924	Olympus	mju 700
0925	Olympus	mju 720 SW
1054	Olympus	mju 725
1056	Olympus	mju 730
1053	Olympus	mju 740
1052	Olympus	mju 750
1119	Olympus	mju 760
1118	Olympus	mju 770
1274	Olympus	mju 780
0661	Olympus	mju 800
0929	Olympus	mju 810
0662	Olympus	mju Mini digital
0827	Olympus	mju mini digital s
0823	Olympus	SP-310
0953	Olympus	SP-320
0824	Olympus	SP-350
0825	Olympus	SP-500UZ
1057	Olympus	SP-510UZ
1124	Olympus	SP-550UZ
0826	Olympus	SP-700
1090	Olympus	X-790
0157	Orange	SPV-M2000
1128	Orion	NV-355
1421	Packard Bell	GPS 400
1422	Packard Bell	GPS 610
1193	Palm	LifeDrive
1207	Palm	Treo
0355	Palm	Treo 180
0356	Palm	Treo 270
0357	Palm	Treo 300
0358	Palm	Treo 600
0342	Palm	Treo 650
1213	Palm	Treo 680

1214	Palm	Treo 750
1337	Palm	Tungsten E2
0359	Palm	Visor
0360	Palm	Visor Deluxe
0361	Palm	Visor Edge
0362	Palm	Visor Neo
0363	Palm	Visor Platinum
0364	Palm	Visor Prism
0365	Palm	Visor Pro
0366	Palm	Visor Solo
0677	Panasonic	DMC-F1-K
0903	Panasonic	DMC-FX01
1066	Panasonic	DMC-FX07
1232	Panasonic	DMC-FX10
1276	Panasonic	DMC-FX12
0669	Panasonic	DMC-FX2
1068	Panasonic	DMC-FX3
1297	Panasonic	DMC-FX30
0800	Panasonic	DMC-FX5
1067	Panasonic	DMC-FX50
0664	Panasonic	DMC-FX7
0665	Panasonic	DMC-FX8
0666	Panasonic	DMC-FX9
0670	Panasonic	DMC-FZ10
0674	Panasonic	DMC-FZ20
0671	Panasonic	DMC-FZ3
0675	Panasonic	DMC-FZ30
0672	Panasonic	DMC-FZ4
0673	Panasonic	DMC-FZ5
1064	Panasonic	DMC-FZ50
0952	Panasonic	DMC-FZ7
1233	Panasonic	DMC-FZ8
1069	Panasonic	DMC-L1
0667	Panasonic	DMC-LC1
0668	Panasonic	DMC-LC5
0676	Panasonic	DMC-LC80
0680	Panasonic	DMC-LS1
0901	Panasonic	DMC-LS3/LS2
1295	Panasonic	DMC-LS60
1275	Panasonic	DMC-LS7
1231	Panasonic	DMC-LS75
0682	Panasonic	DMC-LX1
1065	Panasonic	DMC-LX2
0678	Panasonic	DMC-LZ1
0679	Panasonic	DMC-LZ2
0906	Panasonic	DMC-LZ3
0902	Panasonic	DMC-LZ5
1229	Panasonic	DMC-LZ7
0904	Panasonic	DMC-TZ1
1277	Panasonic	DMC-TZ2
1230	Panasonic	DMC-TZ3
0905	Panasonic	DMC-TZ7
0141	Panasonic	EB-A102
0142	Panasonic	GD55
0143	Panasonic	GD87

0144	Panasonic	GD97
0294	Panasonic	GR-D225EX
0295	Panasonic	NV-GS 1
0296	Panasonic	NV-GS400EG-S
1342	Panasonic	NV-GS80
0147	Panasonic	VS2
0148	Panasonic	VS3
0145	Panasonic	X400
0149	Panasonic	X70
0146	Panasonic	X800
0683	Pentax	*ist D
0684	Pentax	*ist DL
0867	Pentax	*ist DL2
0685	Pentax	*ist DS
1038	Pentax	K100D / K110
1099	Pentax	K10D
0686	Pentax	Optio 30
0687	Pentax	Optio 33WR
0688	Pentax	Optio 430RS
0689	Pentax	Optio 550
0690	Pentax	Optio 555
0801	Pentax	Optio 60
0691	Pentax	Optio 750Z
0863	Pentax	Optio A10
1100	Pentax	Optio A20
1225	Pentax	Optio A30
0865	Pentax	Optio E10
1221	Pentax	Optio E30
0866	Pentax	Optio M10
1098	Pentax	Optio M20
1222	Pentax	Optio M30
0692	Pentax	Optio S
0693	Pentax	Optio S40
0694	Pentax	Optio S45
0697	Pentax	Optio S4i
0698	Pentax	Optio S50
0695	Pentax	Optio S55
0699	Pentax	Optio S5i
0700	Pentax	Optio S5z
0802	Pentax	Optio S6
0696	Pentax	Optio S60
1073	Pentax	Optio S7
0701	Pentax	Optio SV
0702	Pentax	Optio Svi
0864	Pentax	Optio T10/T20
1224	Pentax	Optio T30
0951	Pentax	Optio W10
1097	Pentax	Optio W20
1223	Pentax	Optio W30
0704	Pentax	Optio WP
0703	Pentax	Optio X
0803	Pentax	Wpi
0150	Philips	735
0151	Philips	755
1148	Pioneer	AVH-P5700 DVD

1423	Pioneer	Avic S1
1424	Pioneer	Avic S2
0136	Qtek	2020
0137	Qtek	2020i
0138	Qtek	8010
1172	Qtek	9000
0139	Qtek	9090
0968	Qtek	9100
1135	Qtek	9600
0140	Qtek	S100/200
0705	Revue	DC 211
0275	Ricoh	Caplio 300G
0713	Ricoh	Caplio 400
0714	Ricoh	Caplio G3
0715	Ricoh	Caplio G4
0804	Ricoh	Caplio GR
0706	Ricoh	Caplio GX
1469	Ricoh	Caplio GX100
0707	Ricoh	Caplio GX8
0708	Ricoh	Caplio R1
0709	Ricoh	Caplio R2
0805	Ricoh	Caplio R3/R4/R5
1296	Ricoh	Caplio R6
0710	Ricoh	Caplio RR330
0711	Ricoh	Caplio RZ1
0712	Ricoh	Caplio RZ2
0716	Ricoh	RDC-7
0717	Ricoh	RDC-i700
0718	Ricoh	RX
0719	Rollei	3210
0720	Rollei	dk4010
0721	Rollei	dp4200
1425	Route 66	Chicago 6000
1426	Route 66	Chicago 7000
1427	Route 66	Chicago 8000
1428	Route 66	Chicago 9000
1303	Sagem	my-400V
1316	Sagem	my-501X
0126	Sagem	my-V75
0127	Sagem	my-V76
0128	Sagem	my-V77
0129	Sagem	my-V78
0130	Sagem	my-V79
0131	Sagem	my-V80
0132	Sagem	my-V81
0133	Sagem	my-V82
0134	Sagem	my-V83
0135	Sagem	my-V84
0849	Sagem	my-X6 <sup>2</sup>
0722	Samsung	DIGIMAX A400
0723	Samsung	DIGIMAX A402
0724	Samsung	DIGIMAX A5
1006	Samsung	DIGIMAX A50
0872	Samsung	DIGIMAX A503
0725	Samsung	DIGIMAX A6

0732	Samsung	DIGIMAX i5
0807	Samsung	DIGIMAX i50
0868	Samsung	DIGIMAX i6/NV3/NV10
0819	Samsung	DIGIMAX L55w
0873	Samsung	DIGIMAX L60
0874	Samsung	DIGIMAX L85
0733	Samsung	DIGIMAX Pro 815
0871	Samsung	DIGIMAX S500
0869	Samsung	DIGIMAX S600
0870	Samsung	DIGIMAX S800
0730	Samsung	DIGIMAX U-CA 5
0726	Samsung	DIGIMAX V4
0727	Samsung	DIGIMAX V5
0728	Samsung	DIGIMAX V50 V70
0729	Samsung	DIGIMAX V6
0731	Samsung	DIGIMAX V700
0818	Samsung	DIGIMAX V800
1302	Samsung	GX10
0875	Samsung	GX1L
0876	Samsung	GX1S
1280	Samsung	I7
1279	Samsung	I70
1070	Samsung	L70
1290	Samsung	L70
1281	Samsung	L700
1282	Samsung	L73
1289	Samsung	L74
1288	Samsung	L77
1093	Samsung	NV10
1287	Samsung	NV11
1094	Samsung	NV3
1074	Samsung	NV7 OPS
1071	Samsung	S1000
1283	Samsung	S1050
1284	Samsung	S630
1096	Samsung	S700
1285	Samsung	S730
1286	Samsung	S850
0038	Samsung	SGH-A800
0039	Samsung	SGH-C100
0286	Samsung	SGH-C210
0939	Samsung	SGH-D200
0040	Samsung	SGH-D410
0018	Samsung	SGH-D500
0996	Samsung	SGH-D520
0023	Samsung	SGH-D600
0938	Samsung	SGH-D800
0977	Samsung	SGH-D820
1211	Samsung	SGH-D830
1340	Samsung	SGH-D840
1091	Samsung	SGH-D900
1448	Samsung	SGH-D900i
1210	Samsung	SGH-E250
0041	Samsung	SGH-E310
0042	Samsung	SGH-E330

0043	Samsung	SGH-E340
0044	Samsung	SGH-E348
1020	Samsung	SGH-E370
1092	Samsung	SGH-E380
1179	Samsung	SGH-E500
0045	Samsung	SGH-E530
0046	Samsung	SGH-E600
0047	Samsung	SGH-E620
0048	Samsung	SGH-E630
0049	Samsung	SGH-E700
0050	Samsung	SGH-E710
0002	Samsung	SGH-E720
0024	Samsung	SGH-E730
0937	Samsung	SGH-E760
1158	Samsung	SGH-E770
0019	Samsung	SGH-E800
0051	Samsung	SGH-E810
0052	Samsung	SGH-E820
1459	Samsung	SGH-E840
0053	Samsung	SGH-E850
0021	Samsung	SGH-E860V
1017	Samsung	SGH-E900
0855	Samsung	SGH-i300
1468	Samsung	SGH-i600
0054	Samsung	SGH-N500
0994	Samsung	SGH-P300
1191	Samsung	SGH-P310
0055	Samsung	SGH-P400
0056	Samsung	SGH-P510
0057	Samsung	SGH-P730
1176	Samsung	SGH-P900
0058	Samsung	SGH-S300
0059	Samsung	SGH-S342i
0060	Samsung	SGH-S500
0061	Samsung	SGH-T100
1332	Samsung	SGH-U600
1457	Samsung	SGH-U700
0062	Samsung	SGH-V200
0280	Samsung	SGH-V800
0063	Samsung	SGH-X100
0851	Samsung	SGH-X200
0064	Samsung	SGH-X450
0065	Samsung	SGH-X460
0066	Samsung	SGH-X480
1157	Samsung	SGH-X500
1180	Samsung	SGH-X510
1315	Samsung	SGH-X530
0067	Samsung	SGH-X600
0036	Samsung	SGH-X640
0808	Samsung	SGH-X660
0068	Samsung	SGH-X670
0850	Samsung	SGH-X700
0837	Samsung	SGH-X800
1026	Samsung	SGH-X820
1184	Samsung	SGH-X830

0281	Samsung	SGH-X880
0069	Samsung	SGH-Z105
0070	Samsung	SGH-Z107
0071	Samsung	SGH-Z110
1005	Samsung	SGH-Z140
1309	Samsung	SGH-Z150
1079	Samsung	SGH-Z400
0072	Samsung	SGH-Z500
0995	Samsung	SGH-Z510
1447	Samsung	SGH-Z630
0828	Samsung	SGH-ZV10
0806	Samsung	SGH-ZV30
1187	Sanyo	VPC-E7
1188	Sanyo	VPC-S7
0734	Sanyo	Xacti C4
0735	Sanyo	Xacti C5
0809	Sanyo	Xacti E6
0959	Sanyo	Xacti S60
0740	Sanyo	Xacti VPC-C5
0737	Sanyo	Xacti VPC-J4 EX
0738	Sanyo	Xacti VPC-S1
0739	Sanyo	Xacti VPC-S4
0736	Sanyo	Xacti VPC-S5
1013	SEG	PHP 5600
0073	Sendo	Sendo SV663
0074	Sendo	Sendo X
0075	Sharp	GX10i
0078	Sharp	GX15
0079	Sharp	GX20
0076	Sharp	GX25
0077	Sharp	GX30
0080	Sharp	TM100
0081	Sharp	TM200
0082	Sharp	V902
1028	Siemens	A31
0083	Siemens	A50
0084	Siemens	A57
0085	Siemens	A60
0086	Siemens	A62
0087	Siemens	A65
0088	Siemens	A70
0840	Siemens	A75
1087	Siemens	AX72
0089	Siemens	C35
0090	Siemens	C55
0091	Siemens	C60
0092	Siemens	C62
0093	Siemens	C65
0406	Siemens	C75
0403	Siemens	CF110
0094	Siemens	CF62
0095	Siemens	CFX65
0096	Siemens	CI50
0402	Siemens	CL75
0097	Siemens	CV65

0098	Siemens	CX65
0099	Siemens	CX70
0033	Siemens	CX75
0100	Siemens	CXT70
0101	Siemens	M50
0102	Siemens	M55
0031	Siemens	M65
0035	Siemens	M75
0103	Siemens	MC60
0104	Siemens	ME45
0842	Siemens	ME75
0105	Siemens	MT50
0106	Siemens	S35
0107	Siemens	S45
0108	Siemens	S55
0020	Siemens	S65
0841	Siemens	S75
0109	Siemens	SF65
0852	Siemens	SGX75
0110	Siemens	SL42i
0111	Siemens	SL45i
0112	Siemens	SL55
0022	Siemens	SL65
0834	Siemens	SL75
0297	Siemens	SP65
0113	Siemens	ST55
0114	Siemens	ST60
0115	Siemens	SX1
0116	Siemens	SX45
0117	Siemens	U10
0118	Siemens	U15
0119	Siemens	Xelibri 1
0120	Siemens	Xelibri 2
0121	Siemens	Xelibri 3
0122	Siemens	Xelibri 5
0123	Siemens	Xelibri 6
0124	Siemens	Xelibri 7
0125	Siemens	Xelibri 8
1291	Sigma	DP1
0812	Sigma	SD10
1292	Sigma	SD14
0741	Sigma	SD9
0298	Sony	CCD-TRV418
1123	Sony	Clie NX70V/NX60
0299	Sony	DCR-HC30
0300	Sony	DCR-HC85
0742	Sony	DCR-P101
0301	Sony	DCR-PC110E
0743	Sony	DCR-TRV 50
0305	Sony	DCR-TRV17E
0306	Sony	DCR-TRV30E
0302	Sony	DCR-TRV30E
0303	Sony	DCR-TRV355E
0304	Sony	DCR-TRV480
0745	Sony	DSC-F505

0746	Sony	DSC-F707
0747	Sony	DSC-F717
0748	Sony	DSC-F828
0749	Sony	DSC-F88
1240	Sony	DSC-G1
0750	Sony	DSC-H1
0949	Sony	DSC-H2
1004	Sony	DSC-H5
1243	Sony	DSC-H7
1242	Sony	DSC-H9
0751	Sony	DSC-L1
0983	Sony	DSC-M2
0820	Sony	DSC-N1
1110	Sony	DSC-N2
0752	Sony	DSC-P1
0760	Sony	DSC-P10
0753	Sony	DSC-P100
0761	Sony	DSC-P12
0754	Sony	DSC-P120
0755	Sony	DSC-P200
0756	Sony	DSC-P41
0757	Sony	DSC-P5
0762	Sony	DSC-P50
0763	Sony	DSC-P73
0758	Sony	DSC-P8
0759	Sony	DSC-P9
0764	Sony	DSC-P93
0821	Sony	DSC-R1
1037	Sony	DSC-S500
0765	Sony	DSC-S60
0881	Sony	DSC-S600
1227	Sony	DSC-S650
0766	Sony	DSC-S70
1293	Sony	DSC-S700
0767	Sony	DSC-S80
0744	Sony	DSC-S85
0768	Sony	DSC-S90
0769	Sony	DSC-T1
1072	Sony	DSC-T10
1244	Sony	DSC-T100
1239	Sony	DSC-T20
0770	Sony	DSC-T3
0982	Sony	DSC-T30
0771	Sony	DSC-T33
0822	Sony	DSC-T5
1111	Sony	DSC-T50
0772	Sony	DSC-T7
0862	Sony	DSC-T9
0773	Sony	DSC-U30
0774	Sony	DSC-V1
0775	Sony	DSC-V3
0776	Sony	DSC-W1
0810	Sony	DSC-W10
0877	Sony	DSC-W100
0811	Sony	DSC-W12

0780	Sony	DSC-W15
0778	Sony	DSC-W17
1241	Sony	DSC-W200
0880	Sony	DSC-W30
1228	Sony	DSC-W35
0950	Sony	DSC-W40
0779	Sony	DSC-W5
0879	Sony	DSC-W50
1226	Sony	DSC-W55
0777	Sony	DSC-W7
0878	Sony	DSC-W70
1245	Sony	DSC-W80/W85/W90
1022	Sony	DSLR-Alpha 100
0307	Sony	HDR-HC1
1138	Sony	KAF65
0781	Sony	Mavica MVC-CD 300
0782	Sony	Mavica MVC-CD 400
0783	Sony	Mavica MVC-CD 500
0784	Sony	MVC-CD500
0785	Sony	MVC-FD83
1127	Sony	NV-U50/70
1429	Sony	NV-U51
1011	Sony	NV-U70T
1430	Sony	NV-U71T
1431	Sony	NV-U80
1432	Sony	NV-U81T
1462	Sony	NV-U92TC
1000	Sony	NVX-P1
0786	Sony	P10
0272	Sony	PSP
0271	Sony	PSP vereinfacht
0027	Sony Ericsson	D750i
1467	Sony Ericsson	K200i/K220i
1077	Sony Ericsson	K300i
1199	Sony Ericsson	K310i
1161	Sony Ericsson	K510i
1089	Sony Ericsson	K550i
0408	Sony Ericsson	K600i
1024	Sony Ericsson	K610i
0001	Sony Ericsson	K700i
0004	Sony Ericsson	K750i
1015	Sony Ericsson	K800i
1338	Sony Ericsson	K810i
1019	Sony Ericsson	M600i
0005	Sony Ericsson	P910i
1032	Sony Ericsson	P990i
1466	Sony Ericsson	S500i
0003	Sony Ericsson	S700i
1131	Sony Ericsson	T610
1001	Sony Ericsson	T630
0409	Sony Ericsson	V600
1204	Sony Ericsson	V630i
1304	Sony Ericsson	W200i
1160	Sony Ericsson	W300i
0407	Sony Ericsson	W550i

1460	Sony Ericsson	W610i
1008	Sony Ericsson	W700i
1237	Sony Ericsson	W710i
0037	Sony Ericsson	W800i
0978	Sony Ericsson	W810i
1163	Sony Ericsson	W850i
1212	Sony Ericsson	W880i
0838	Sony Ericsson	W900i
1162	Sony Ericsson	W950i
1169	Sony Ericsson	Z300i
0835	Sony Ericsson	Z520i
1159	Sony Ericsson	Z550i
1183	Sony Ericsson	Z610i
1238	Sony Ericsson	Z710i
0787	Speedlite	550 EX
0788	Speedlite	580 EX
0344	Tchibo	Navi TCM 2005
0343	T-Com	Sinus WDA
0284	Telme	T919
1433	Tevion	GPS-Navi
1144	Thyphoon	MyGuide 3620 Go
0330	Thyphoon	MyGuide 5500
0331	Thyphoon	MyGuide 5500 XL
0332	Thyphoon	MyGuide 6500
0333	Thyphoon	MyGuide 6500 XL
1217	T-Mobile	Ameo
0006	T-Mobile	MDA / MDA II
0008	T-Mobile	MDA Compact
0856	T-Mobile	MDA Compact II
1151	T-Mobile	MDA Compact III
0007	T-Mobile	MDA III
0401	T-Mobile	MDA Pro
0283	T-Mobile	MDA Vario
1134	T-Mobile	MDA Vario II
0025	T-Mobile	SDA
0256	T-Mobile	SDA Mini
0026	T-Mobile	SDA Music
0030	T-Mobile	Sidekick II
0273	TomTom	GO 300
0861	TomTom	GO 500
1010	TomTom	GO 510/710/910
0274	TomTom	GO 700
0999	TomTom	ONE Regional/Europe
1434	Tomtom	ONE XL
0998	TomTom	RIDER
0276	Toshiba	E400
0277	Toshiba	E740
0278	Toshiba	E800 WIFI
1164	Trekstor	i.Beat joy2.0
1435	VDO Dayton	MM2100
1436	VDO Dayton	MM5200
1437	VDO Dayton	MM5300
1438	VDO Dayton	MM5500
1440	VDO Dayton	PN2050
1439	VDO Dayton	PN3000

1132	ViaMichelin	X930
1441	ViaMichelin	X950
1442	ViaMichelin	X950T
0285	Viewsonic	V35
0279	Vodafone	VPA
0287	Vodafone	VPA Compact
0857	Vodafone	VPA Compact II
1209	Vodafone	VPA Compact III
1030	Vodafone	VPA Compact s
0288	Vodafone	VPA III
0845	Vodafone	VPA IV
0844	Vodafone	VPA Mini
0933	Voigtlaender	D 5/6
0932	Voigtlaender	D 8
1117	Voigtlaender	XM 7.0
1116	Voigtlaender	XM 8600
0345	Yakumo	Alpha
0282	Yakumo	Delta 300/400
1443	Yakumo	Easy go
1444	Yakumo	Easy go XS
1445	Yakumo	Easy go XSC